

**ACCESSORIES**

**Electric pressure control**

**Technical parameter - Connector G**

Model	Pressure range bar		Differential bar		Factory Setting bar		Max. Bellows Press. bar	Connector
	Min	Max	Min	Max	OFF	ON		
HLP503	-0.7	3	0.2	1.5	2	1	16.5	G 1/4" or G 7/16"
HLP506	-0.7	6	0.6	4	3	2	16.5	G 1/4" or G 7/16"
HLP506M	-0.7	6	Duplicate voltage disparity≤1		3	Manual Reset	16.5	G 1/4" or G 7/16"
HLP110	1	10	1	3	6	5	16.5	G 1/4" or G 7/16"
HLP516	5	16	1	4	10	8	35	G 1/4" or G 7/16"
HLP520	5	24	2	5	16	13	35	G 1/4" or G 7/16"
HLP530D	5	30	5	10	20	15	35	G 1/4" or G 7/16"
HLP530	8	30	Fixed3-5		20	15-17	35	G 1/4" or G 7/16"
HLP530M	8	30	Duplicate voltage disparity≤4		20	Manual Reset	35	G 1/4" or G 7/16"



**Technical parameter - Connector NPT**

Model	Pressure range bar		Differential bar		Factory Setting bar		Max. Bellows Press. bar	Connector
	Min	Max	Min	Max	OFF	ON		
HLP503	-0.7	3	0.2	1.5	2	1	16.5	NPT1/4" or NPT7/16"
HLP506	-0.7	6	0.6	4	3	2	16.5	NPT1/4" or NPT7/16"
HLP506M	-0.7	6	Duplicate voltage disparity≤1		3	Manual Reset	16.5	NPT1/4" or NPT7/16"
HLP110	1	10	1	3	6	5	16.5	NPT1/4" or NPT7/16"
HLP516	5	16	1	4	10	8	35	NPT1/4" or NPT7/16"
HLP520	5	24	2	5	16	13	35	NPT1/4" or NPT7/16"
HLP530D	5	30	5	10	20	15	35	NPT1/4" or NPT7/16"
HLP530	8	30	Fixed3-5		20	15-17	35	NPT1/4" or NPT7/16"
HLP530M	8	30	Duplicate voltage disparity≤4		20	Manual Reset	35	NPT1/4" or NPT7/16"

